

NAME

acpi_dock - Laptop Docking Station device driver

SYNOPSIS

To compile this driver into the kernel, place the following lines in your kernel configuration file:

```
device acpi_dock
```

Alternatively, to load the driver as a module at boot time, place the following line in loader.conf(5):

```
acpi_dock_load="YES"
```

DESCRIPTION

The **acpi_dock** driver provides support for laptop docking stations.

SEE ALSO

acpi(4)

HISTORY

The **acpi_dock** device driver first appeared in FreeBSD 7.0.

AUTHORS

The **acpi_dock** device driver was written by Mitsuru IWASAKI <iwasaki@FreeBSD.org>.