

**NAME**

**bhndb** - Broadcom Home Networking Division interconnect bridge driver

**SYNOPSIS**

To compile this driver into the kernel, add the following lines to the kernel configuration file:

```
device bhnd
device bhndb
```

To load the driver as a module at boot, add this line to loader.conf(5):

```
bhndb_load="YES"
```

**DESCRIPTION**

The **bhndb** driver provides bhnd(4) host bridge support for Broadcom Home Networking Division's wireless chipsets and network adapters.

To enable use for PCI/PCIe systems, see the bhndb\_pci(4) driver.

**SEE ALSO**

bhnd(4), bhndb\_pci(4), bwn(4), intro(4)

**HISTORY**

The **bhndb** device driver first appeared in FreeBSD 11.0.

**AUTHORS**

The **bhndb** driver was written by Landon Fuller <[landonf@FreeBSD.org](mailto:landonf@FreeBSD.org)>.

**CAVEATS**

The **bhndb** driver does not currently support PCMCIA or SDIO devices.