

**NAME**

**bhndb\_pci** - Broadcom Home Networking Division PCI host bridge driver

**SYNOPSIS**

To compile this driver into the kernel, add the following lines to the kernel configuration file:

```
device bhnd
device bhndb
device bhndb_pci
device pci
```

To load the driver as a module at boot, add this line to loader.conf(5):

```
bhndb_pci_load="YES"
```

**DESCRIPTION**

The **bhndb\_pci** driver provides bhndb(4) support for the PCI and PCIe host bridge cores found in Broadcom Home Networking Division's wireless chipsets and network adapters.

**SEE ALSO**

bhnd(4), bhndb(4), bwn(4), intro(4), pci(4)

**HISTORY**

The **bhndb\_pci** device driver first appeared in FreeBSD 11.0.

**AUTHORS**

The **bhndb\_pci** driver was written by Landon Fuller <[landonf@FreeBSD.org](mailto:landonf@FreeBSD.org)>.