

NAME

ftwd - Fintek F81803 watchdog timer

SYNOPSIS

To compile this driver into the kernel, place the following lines in your kernel configuration file:

```
device superio  
device ftwd
```

Alternatively, to load the driver as a module at boot time, place the following line in loader.conf(5):

```
ftwd_load="YES"
```

DESCRIPTION

The **ftwd** driver provides watchdog(4) support for the watchdog timer in the Fintek F81803 chip.

SEE ALSO

superio(4), watchdog(4), device.hints(5), watchdog(8), watchdogd(8), watchdog(9)

AUTHORS

This manual page was written by Poul-Henning Kamp <phk@FreeBSD.org>.