

NAME

hptnr - HighPoint DC Series Data Center HBA card driver

SYNOPSIS

To compile this driver into the kernel, place the following line in your kernel configuration file:

```
device hptnr
```

Alternatively, to load the driver as a module at boot time, place the following line in loader.conf(5):

```
hptnr_load="YES"
```

DESCRIPTION

The **hptnr** driver provides support for HighPoint's DC Series Data Center HBA card.

HARDWARE

The **hptnr** driver supports the following SATA controllers:

- HighPoint's DC7280 series
- HighPoint's Rocket R750 series

NOTES

The **hptnr** driver only works on the i386 and amd64 platforms as it requires a binary blob object from the manufacturer which they only supply for these platforms. The **hptnr** driver does *not* work on i386 with pae(4) enabled.

SEE ALSO

kld(4), kldload(8), loader(8)

HISTORY

The **hptnr** device driver first appeared in FreeBSD 9.2.

AUTHORS

The **hptnr** device driver was written by HighPoint Technologies, Inc.. This manual page was written by Xin LI <delphij@FreeBSD.org> for iXsystems, Inc.