

NAME

IBSTAT -

QUERY BASIC STATUS OF INFINIBAND DEVICE(S)**SYNOPSIS**

ibstat [options] <ca_name> [portnum]

DESCRIPTION

ibstat is a binary which displays basic information obtained from the local IB driver. Output includes LID, SMLID, port state, link width active, and port physical state.

It is similar to the ibstatus utility but implemented as a binary rather than a script. It has options to list CAs and/or ports and displays more information than ibstatus.

OPTIONS**-l, --list_of_cas**

list all IB devices

-s, --short

short output

-p, --port_list

show port list

ca_name

InfiniBand device name

portnum

port number of InfiniBand device

Debugging flags**-d** raise the IB debugging level. May be used several times (-ddd or -d -d -d).**-h, --help** show the usage message**-v, --verbose**

increase the application verbosity level. May be used several times (-vv or -v -v -v)

-V, --version show the version info.

Configuration flags

--config, -z <config_file> Specify alternate config file.

Default: /etc/infiniband-diags/ibdiag.conf

EXAMPLES

```
:: ibstat      # display status of all ports on all IB devices
ibstat -l      # list all IB devices
# show port guids
ibstat mthca0 2 # show status of port 2 of 'mthca0'
```

SEE ALSO

ibstatus (8)

AUTHOR

Hal Rosenstock

<halr@voltaire.com>