

NAME

imx6_ahci - device driver for the NXP i.MX6 on-chip SATA controller

SYNOPSIS

To compile this driver into the kernel, place the following line in your kernel configuration file:

```
device ahci
```

Alternatively, to load the driver as a module at boot time, place the following line in loader.conf(5):

```
imx6_ahci_load="YES"
```

DESCRIPTION

The **imx6_ahci** driver provides support for the on-chip SATA controller found on some models of the NXP i.MX6 chip. The driver is a thin glue layer to interpret the platform's FDT data and marshal resources for the standard ahci(4) driver.

SEE ALSO

ahci(4), fdt(4),

HISTORY

The **imx6_ahci** driver first appeared in FreeBSD 12.0.