

NAME

llan - POWER Logical Lan

SYNOPSIS

To compile this driver into the kernel, place the following lines in your kernel configuration file:

```
device llan
```

DESCRIPTION

The **llan** driver provides support for the inter-partition logical LAN controller provided by PAPR-compliant POWER hypervisors (such as PowerVM and PowerKVM). On some firmwares, advanced offload features are supported by the hypervisor, but these are not currently supported by the driver.

SEE ALSO

vtnet(4), ifconfig(8)

HISTORY

The **llan** device driver appeared in FreeBSD 10.0.

AUTHORS

The **llan** driver was written by Nathan Whitehorn <nwhitehorn@FreeBSD.org>.