

**NAME**

**mpi3mr** - Broadcom MPIMR 3.0 IT/IR 24Gb/s SAS Tri-Mode RAID PCIe 4.0 driver

**SYNOPSIS**

The driver can be loaded as a module at boot time by placing this line in loader.conf(5):

```
mpi3mr_load="YES"
```

**DESCRIPTION**

The **mpi3mr** driver provides support for Broadcom Ltd. MPIMR 3.0 IT/IR PCIe 4 controller.

**HARDWARE**

These controllers are supported by the **mpi3mr** driver:

- ⊕ Broadcom Ltd. SAS 4116 Tri-Mode RAID Adapter
- ⊕ Broadcom Ltd. 9670W-16i 24G PCIe 4.0 Tri-Mode RAID Adapters
- ⊕ Broadcom Ltd. 9670-24i 24G PCIe 4.0 Tri-Mode RAID Adapters
- ⊕ Broadcom Ltd. 9660-16i 24G PCIe 4.0 Tri-Mode RAID Adapters
- ⊕ Broadcom Ltd. 9620-16i 24G PCIe 4.0 Tri-Mode RAID Adapters
- ⊕ Broadcom Ltd. 9600-24i 24G PCIe 4.0 Tri-Mode RAID Adapters
- ⊕ Broadcom Ltd. 9600-16i 24G PCIe 4.0 Tri-Mode RAID Adapters
- ⊕ Broadcom Ltd. 9600W-16e 24G PCIe 4.0 Tri-Mode RAID Adapters
- ⊕ Broadcom Ltd. 9600-16e 24G PCIe 4.0 Tri-Mode RAID Adapters
- ⊕ Broadcom Ltd. 9600-8i8e 24G PCIe 4.0 Tri-Mode RAID Adapters

**SEE ALSO**

cam(4), cd(4), ch(4), da(4), mpr(4), pci(4), sa(4), scsi(4).

**HISTORY**

The **mpi3mr** driver first appeared in FreeBSD 14.0.

**AUTHORS**

The **mpi3mr** driver was written by Sumit Saxena <sumit.saxena@broadcom.com>, and Chandrakanth Patil <chandrakanth.patil@broadcom.com>. This manual page was written by Warner Losh <imp@FreeBSD.org>.