

**NAME**

**muge** - Microchip LAN78xx USB Gigabit Ethernet driver

**SYNOPSIS**

To load the driver as a module at boot time, place the following line in loader.conf(5):

```
if_muge_load="YES"
```

**DESCRIPTION**

The **muge** device driver provides support for USB Gigabit Ethernet adapters based on Microchip's LAN78xx and LAN7515 chipsets.

For more information on configuring this device, see ifconfig(8).

**HARDWARE**

The **muge** driver supports:

- Microchip LAN7800 USB 3.1 Gigabit Ethernet controller with PHY
- Microchip LAN7850 USB 2.0 Gigabit Ethernet controller with PHY
- Microchip LAN7515 USB 2 hub and Gigabit Ethernet controller with PHY

**SEE ALSO**

arp(4), miibus(4), usb(4), ifconfig(8)

**HISTORY**

The **muge** device driver first appeared in FreeBSD 12.0.