

**NAME**

**otusfw** - Firmware Module for AR9170 driver

**SYNOPSIS**

To compile this module into the kernel, place the following line in your kernel configuration file:

```
device otusfw
```

This will include the firmware image, AR9170, inside the kernel. otus(4) will load the image into the chip.

Alternatively, to load the firmware images as a module at boot time, place the following line in loader.conf(5):

```
otusfw_init_load="YES"  
otusfw_main_load="YES"
```

**DESCRIPTION**

This module provides the firmware for the Atheros AR9170 based USB WiFi adapters.

**SEE ALSO**

otus(4), firmware(9)