

**NAME**

**snd\_als4000** - Avance Logic ALS4000 PCI bridge device driver

**SYNOPSIS**

To compile this driver into the kernel, place the following lines in your kernel configuration file:

```
device sound  
device snd_als4000
```

Alternatively, to load the driver as a module at boot time, place the following line in loader.conf(5):

```
snd_als4000_load="YES"
```

**DESCRIPTION**

The **snd\_als4000** bridge driver allows the generic audio driver `sound(4)` to attach to the ALS4000 sound card.

**HARDWARE**

The **snd\_als4000** driver supports the following sound cards:

- Avance Logic ALS4000

**SEE ALSO**

`sound(4)`

**HISTORY**

The **snd\_als4000** device driver first appeared in FreeBSD 4.4.

**AUTHORS**

Orion Hodson <[oho@acm.org](mailto:oho@acm.org)>