

NAME

snd_als4000 - Avance Logic ALS4000 PCI bridge device driver

SYNOPSIS

To compile this driver into the kernel, place the following lines in your kernel configuration file:

```
device sound
device snd_als4000
```

Alternatively, to load the driver as a module at boot time, place the following line in loader.conf(5):

```
snd_als4000_load="YES"
```

DESCRIPTION

The **snd_als4000** bridge driver allows the generic audio driver sound(4) to attach to the ALS4000 sound card.

HARDWARE

The **snd_als4000** driver supports the following sound cards:

- Avance Logic ALS4000

SEE ALSO

sound(4)

HISTORY

The **snd_als4000** device driver first appeared in FreeBSD 4.4.

AUTHORS

Orion Hodson <oho@acm.org>