

**NAME**

**snd\_hdspe** - RME HDSPE bridge device driver

**SYNOPSIS**

To compile this driver into the kernel, place the following lines in your kernel configuration file:

```
device sound  
device snd_hdspe
```

Alternatively, to load the driver as a module at boot time, place the following line in loader.conf(5):

```
snd_hdspe_load="YES"
```

**DESCRIPTION**

The **snd\_hdspe** bridge driver allows the generic audio driver sound(4) to attach to RME HDSPE audio devices.

**HARDWARE**

The **snd\_hdspe** driver supports the following audio devices:

- ⊕ RME HDSPE AIO
- ⊕ RME HDSPE RayDAT

**SEE ALSO**

sound(4)

**HISTORY**

The **snd\_hdspe** device driver first appeared in FreeBSD 10.0.

**AUTHORS**

The **snd\_hdspe** driver was written by Ruslan Bukin <br@bsdpad.com>.