

NAME

snd_spicds - I2S SPI audio codec driver

SYNOPSIS

To compile this driver into the kernel, place the following lines in your kernel configuration file:

```
device snd_spicds
```

Alternatively, to load the driver as a module at boot time, place the following line in loader.conf(5):

```
snd_spicds_load="YES"
```

DESCRIPTION

The **snd_spicds** I2S codec driver is used by several sound drivers for soundcards which use the supported codec chips.

HARDWARE

The **snd_spicds** driver supports the following codecs:

- ⊕ AK4358
- ⊕ AK4381
- ⊕ AK4396
- ⊕ AK4524
- ⊕ AK4528
- ⊕ WM8770

SEE ALSO

snd_envy24(4), snd_envy24ht(4), sound(4)

HISTORY

The **snd_spicds** device driver first appeared in FreeBSD 6.3.

AUTHORS

The **snd_spicds** driver was written by Konstantin Dimitrov based upon the snd_envy24(4) driver. This manual page was written by Alexander Leidinger <*netchild@FreeBSD.org*>.