

**NAME**

**snd\_t4dwave** - Trident 4DWave bridge device driver

**SYNOPSIS**

To compile this driver into the kernel, place the following lines in your kernel configuration file:

```
device sound
device snd_t4dwave
```

Alternatively, to load the driver as a module at boot time, place the following line in loader.conf(5):

```
snd_t4dwave_load="YES"
```

**DESCRIPTION**

The **snd\_t4dwave** bridge driver allows the generic audio driver, sound(4), to attach to Trident 4DWave audio devices.

**HARDWARE**

The **snd\_t4dwave** driver supports the following audio devices:

- ⊕ Acer Labs M5451
- ⊕ SIS 7018
- ⊕ Trident 4DWave DX
- ⊕ Trident 4DWave NX

**SEE ALSO**

sound(4)

**HISTORY**

The **snd\_t4dwave** device driver first appeared in FreeBSD 4.0.

**AUTHORS**

This manual page was written by Joel Dahl <[joel@FreeBSD.org](mailto:joel@FreeBSD.org)>.