

**NAME**

**ubser** - USB support for BWCT console serial adapters

**SYNOPSIS**

To compile this driver into the kernel, place the following line in your kernel configuration file:

```
device usb  
device ucom  
device ubser
```

Alternatively, to load the driver as a module at boot time, place the following line in loader.conf(5):

```
ubser_load="YES"
```

**HARDWARE**

The **ubser** driver provides support for the BWCT console management serial adapters.

**FILES**

```
/dev/ttyU*.*      for callin ports  
/dev/ttyU*.*.init  
/dev/ttyU*.*.lock  
                    corresponding callin initial-state and lock-state devices  
  
/dev/cuaU*.*      for callout ports  
/dev/cuaU*.*.init  
/dev/cuaU*.*.lock  
                    corresponding callout initial-state and lock-state devices
```

**SEE ALSO**

tty(4), ucom(4), usb(4)

**HISTORY**

The **ubser** driver appeared in FreeBSD 5.2.